



EZ MOUNTAIN RUSTIC FURNITURE

Bed Assembly Guide


Required Tools:

- 1/2" Socket Wrench
- Cordless Drill with a #2 Square bit or a screwdriver with a #2 square bit

Before you begin remove any packing materials and separate the pieces. You should have the following pieces:




1 - Headboard

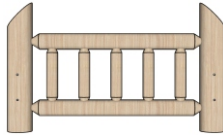

1 - Footboard





2 - Side Rails

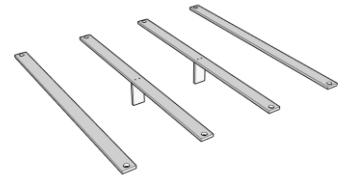

3 or 4 - Slats



Step 1: Using the pre-installed brackets and lag bolts, attach one side rail to the headboard, followed by attaching it to the footboard. Do not tighten bolts.

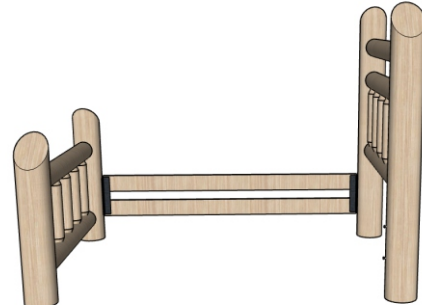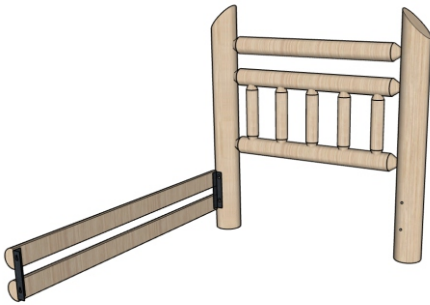

Step 2: Attach the second side rail to the headboard, followed by the footboard. Tighten all bolts with a 1/2" socket wrench. Do not over tighten.



Step 3: Install the slats by placing them on the pegs or metal brackets which are pre-installed on each side rail.

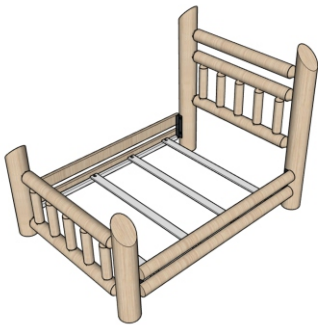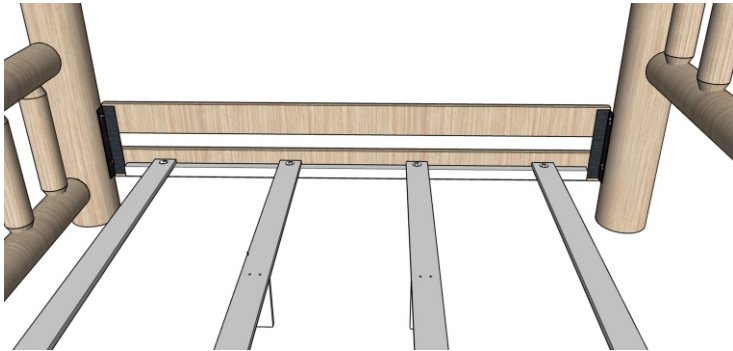

Step 4: Attach the vertical supports to the slats using the screw provided.

