



EZ MOUNTAIN RUSTIC FURNITURE

Oak Bunk Bed Assembly Guide

Required Tools:

- 1/2" Socket Wrench


Before you begin remove any packing materials and separate the pieces. You should have the following pieces:



2 - Headboard




6 - Side Rails

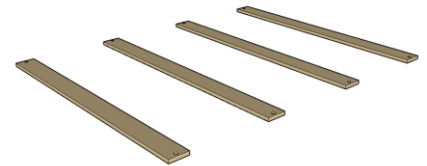


4 - Slats


Step 1: Using the pre-installed brackets and lag bolts attach one side rail to the headboard, followed by attaching it to the footboard. We recommend starting with the bottom rail and working your way up. The two top rails have to be installed at the same time. Do not tighten bolts.

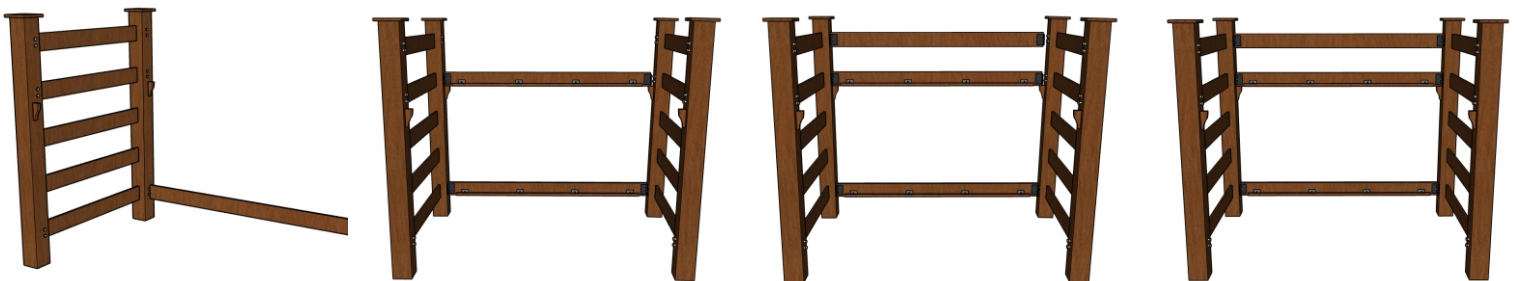

Step 2: Attach the second set of side rails to both ends.

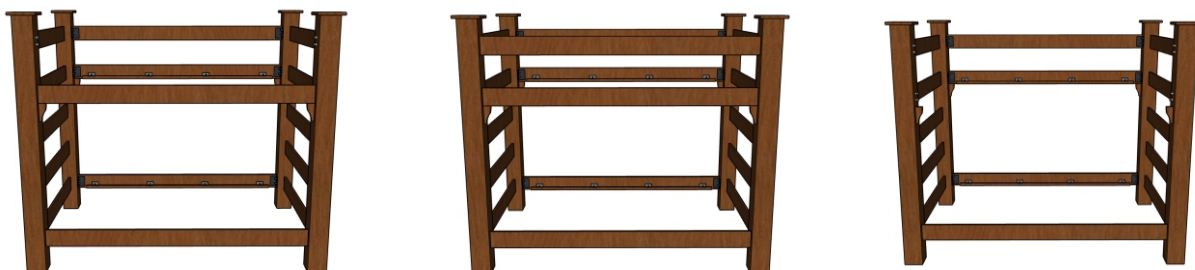

Step 3: Tighten all bolts with a 1/2" socket wrench. Do not over tighten.

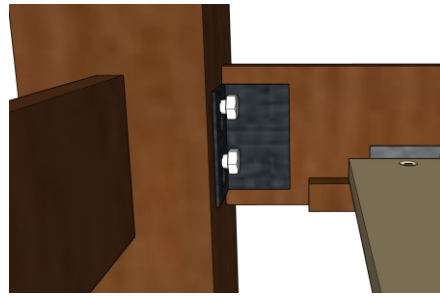

Step 4: Install the slats by placing them on the pre-installed brackets. Lastly, add a bunkie board and mattress (sold separately).

