



# EZ MOUNTAIN RUSTIC FURNITURE

## Platform Bed Assembly Guide

### Required Tools:

- 1/2" Deep Socket Wrench or 1/2" Ratchet Wrench

Before you begin remove any packing materials and separate the pieces. You should have the following pieces:



1 - Headboard



1 - Footboard



2 - Drawer Units




8 - Washers & Nuts




1 - Filler Board  
(King beds only)


**Step 1:** Place the headboard as close to the final location as possible. Remove the nut & washer from each bolt.

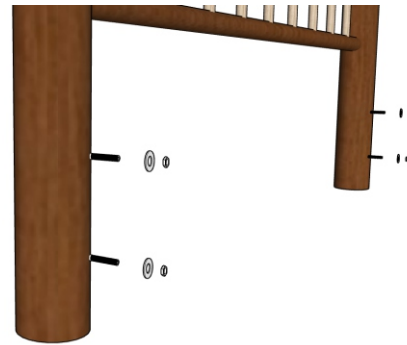

**Step 2:** Align the drawer boxes with the bolts in the headboard one at a time. Insert the bolts into the drawer boxes fully.

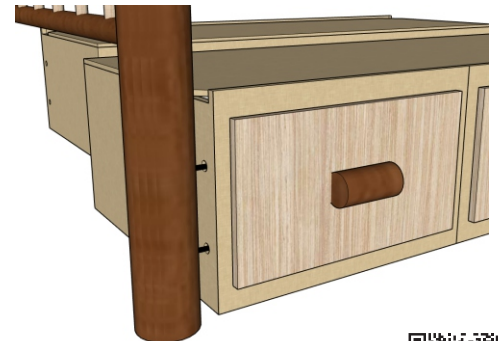

**Step 3:** Add 1 washer and nut to each bolt and tighten until snug.

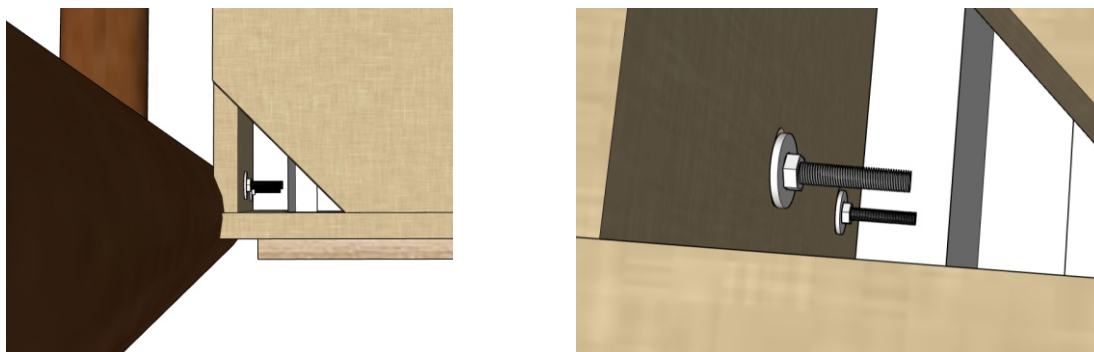

**Step 4:** Align the bolts on the footboard with the holes in the drawers. Repeat step 3. If you purchased a king size bed continue to step 5, if you purchased a queen size or smaller you are finished! Add your mattress, no box spring required.



**Step 5 (King size beds only):** Place the plywood filler board between the drawer boxes. Add your mattress, no box spring required.

